



Maintenance Schedule

Prior to Using (Daily)

- (For corded models) Check AC power cord. Do NOT operate equipment if AC power cord is cut, frayed, or if ground is missing.
- Check grip face and driver pad. Inspect for wear/debris.

After Use (Daily)

- Clean pad and base plate assembly. Remove or replace pad as needed.
- Inspect grip face for wear. Remove debris between grip face and base plate.
- Wipe entire unit with a damp microfiber cloth.
- Make certain a pad is placed on the grip face.

Weekly Preventative Maintenance

- Check grip face for wear.
- Use a vacuum to clean away debris build-up around base plate.

Annually

- Replace ALL isolators.
- Bearing assembly should be replaced as needed*

*The bearing assembly is considered to be a wear item. We recommend that the bearing assembly be replaced as needed. Unit will become noisy when bearing needs to be replaced.

****Note:** Replace the isolators when you replace the bearing.

Doodle Scrub One Year Maintenance Kit - (4 isolators, 4 washers, 4 isolator top screws, 8 isolator bottom screws, 3 grip faces, & thread lock)

- Replace grip face every 4 months.
- On 3rd service replace the grip face and the isolators.
- Instructions for replacing the gripface can be found at: <https://youtu.be/0z2MAfusWuI>