




Make certain a pad is between the grip face and the floor.



Press down firmly to attach the handle to either side. Loosen the wingnut if necessary.



After the handle is clipped on, tighten the wingnut.

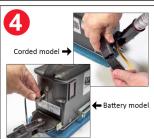

Plug the 2 yellow cords together at the base for corded models, plug the black cord into the base for battery powered models.



Squeeze the trigger to operate the Doodle Scrub.



To remove the handle, loosen the wingnut, hold the handle upright and turn the handle to the side to release it.