

HEPA Dry Vac Kit Mounting Instructions



What You Will Need

- ☐ 3/8" Hand-Held Nut Driver
- ☐ Torx T20 Screwdriver
- ☐ Phillips Head Screwdriver
- ☐ Flat Tip Screw Driver
- ☐ HEPA Dry Vac Kit Mounting Bracket assembly



1. Use a Torx 20 screwdriver to remove the screws from both the back and underneath the handle on the Pivot.




2. Remove the front plate and remove the hole plugs.(circled in red) Use a small flat tip screwdriver to push out the locking hole plugs.

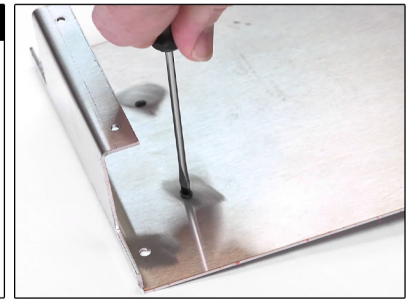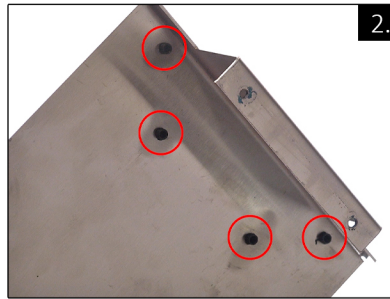



3. Align the holes in the mounting bracket with the holes in the front plate. Insert the provided carriage bolt through the bracket and the front face plate.

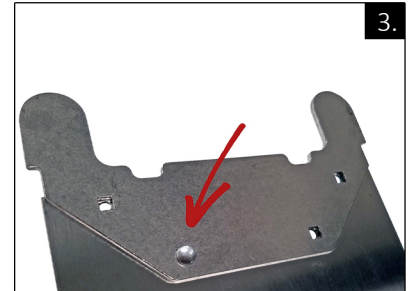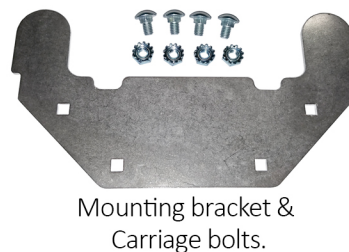

4. Tighten the nuts on the opposite side using a 3/8 in socket.

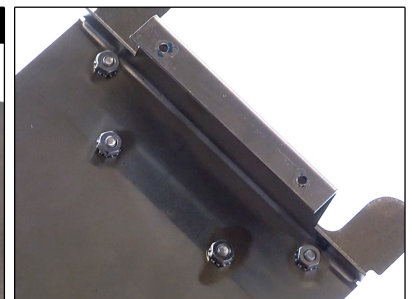

5. Place the face plate back on the Pivot.
Reattach using the new screws provided with the kit. Do Not use old screws that were removed.

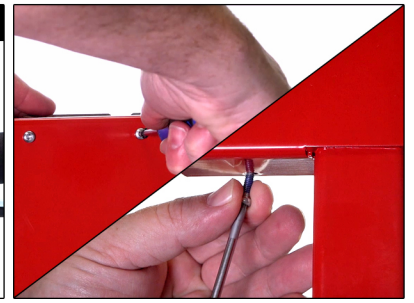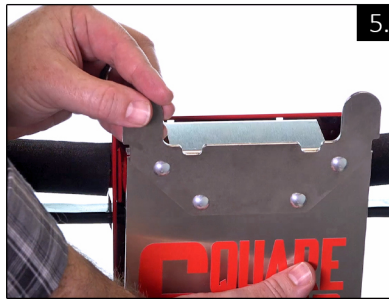


6. Place the vacuum over the top mounting bracket as shown.




7. Attach the bottom elbow brackets to the vacuum using a phillips head screwdriver.



Elbow brackets, bolt, & wing nut

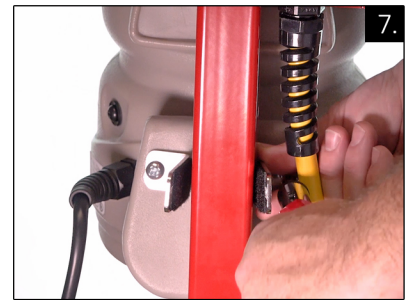


8. Use the long bolt and wing nut to attach the vacuum to the handle.

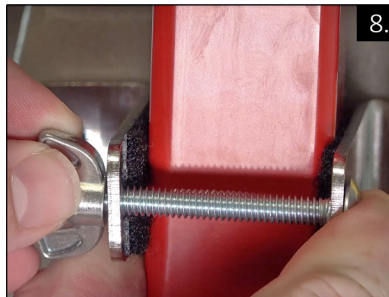

9. Plug in the 3-way plug to the motor and power cord, then the vacuum.




10. Plug the hose from the vacuum into the base of the Pivot.

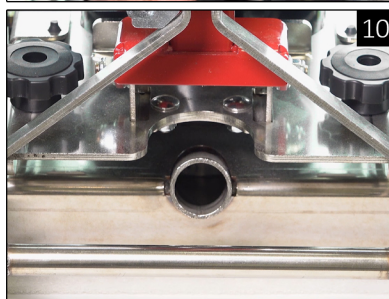

800-557-6822
www.squarescrub.com

11. Flip the power switch on the vacuum to turn it on.

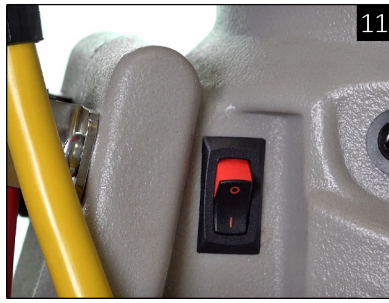

EBG-20/CV Pivot & EBG-28V Pivot



800-557-6822
www.squarescrub.com