

## Doodle Scrub<sup>®</sup> Handle Conversion Kit



### Doodle Scrub<sup>®</sup> Handle Conversion Kit

- New Doodle Scrub<sup>®</sup> cover
- 4 cover screws
- 4 cover washers
- 1 motor ground screw
- 2 wire connectors
- Wiring harness
- New Doodle Scrub<sup>®</sup> handle.
- 100% silicone.

### What You Will Need

- |   |   |
|---|---|
| <input type="checkbox"/> Doodle Scrub <sup>®</sup> Handle Replacement Kit | <input type="checkbox"/> Torx 20                  |
| <input type="checkbox"/> Pliers   | <input type="checkbox"/> 2.5mm Allen Wrench       |
| <input type="checkbox"/> Wire Cutters                                     | <input type="checkbox"/> Impact Driver (optional) |




Unplug the power cord and disconnect the handle.




Use a Torx 20 to remove the 4 base screws. Remove the carry strap.



**800-557-6822**  
**[www.squarescrub.com](http://www.squarescrub.com)**

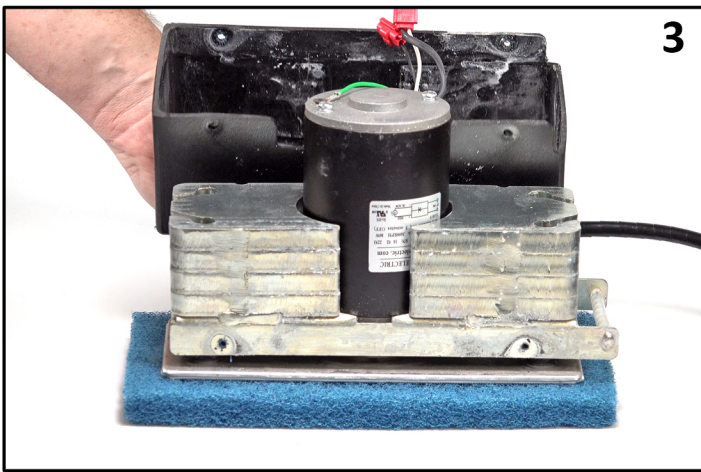

Lift the cover and set it beside the Doodle Scrub® base.

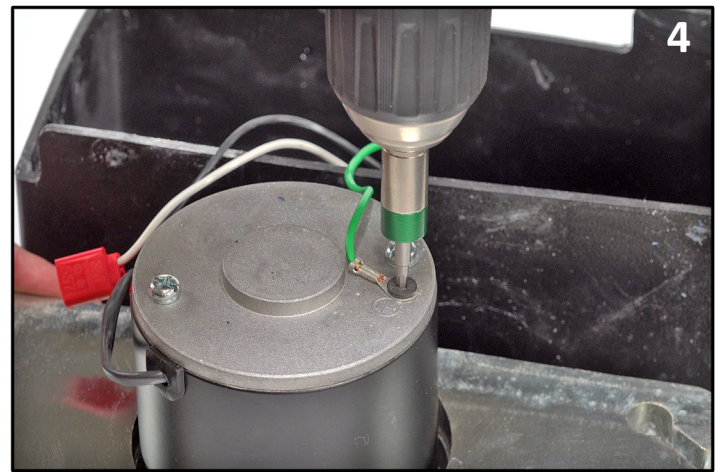


Use a 2.5 mm Allen wrench, or impact driver, to remove the motor ground screw.




Cut both sets of black and red wires leading from the red wire connectors.



Apply a bead of silicon to the machine base.

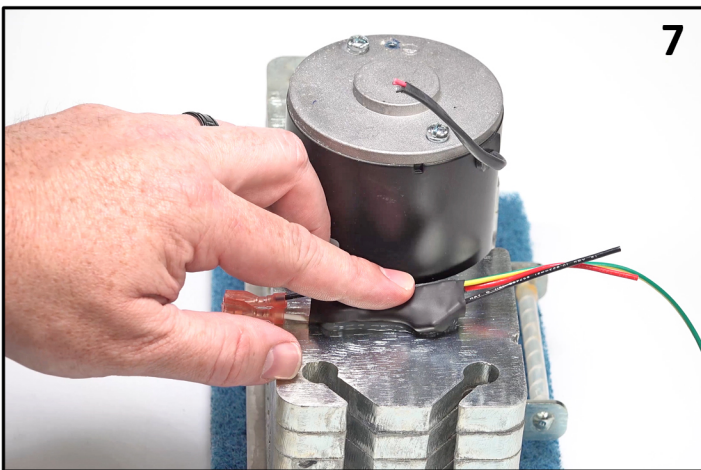

Set the new wiring harness in the silicon.  
Allow 2-4 hours for the silicon to completely dry.

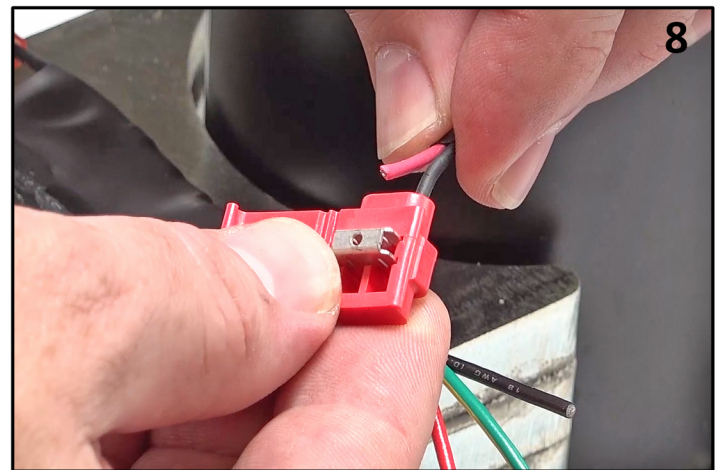


Insert the red wire from the motor and the red wire from the harness into the connector.



**800-557-6822**  
**[www.squarescrub.com](http://www.squarescrub.com)**




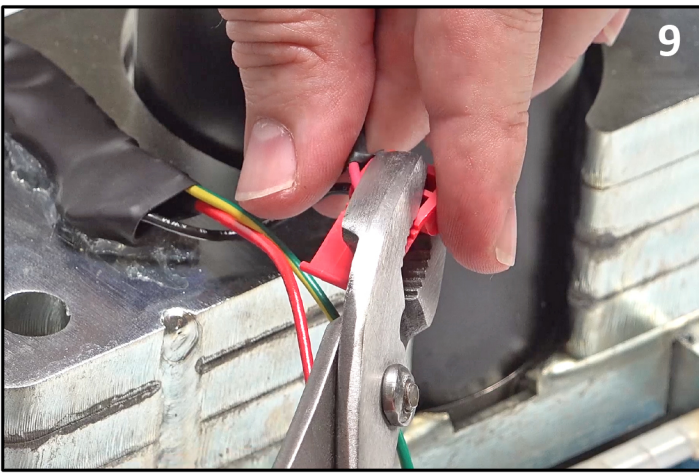

Clamp down using pliers. Repeat steps 8 and 9 with the black wire from the motor and the black wire from the harness.



Connect both green ground wires to the motor using the new motor ground screw.

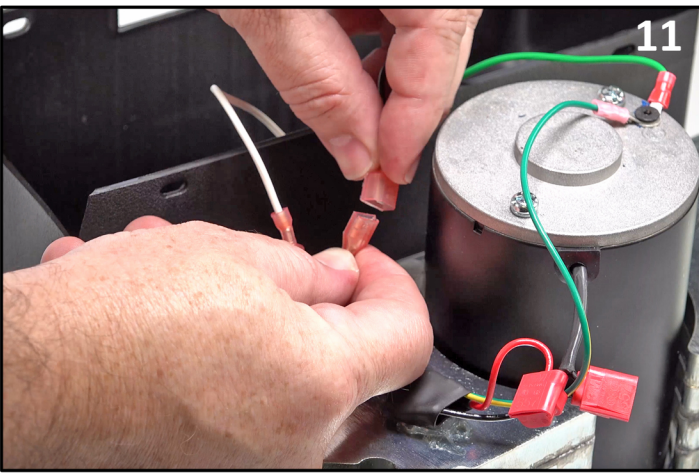

Connect the two white wires and the two black wires.



Lower the new cover onto the Doodle Scrub® base.



Align the carry strap, and install the 4 new cover screws.



Connect the new handle and power supply, and test the Doodle Scrub® on a driver pad.



**800-557-6822**  
**[www.squarescrub.com](http://www.squarescrub.com)**